EFG012682

EFG Active

EFG Active är nästa generations sitta/ståbord. Bordssystemet har extra tysta motorer vilket är viktigt i öppna kontor. Bordet är även förberett för att kunna koppla in ny IT-teknik med bl.a. bokningssystem som innebär att man kan se beläggningen på sina bord samt göra dessa bokningsbara.

European Furniture Group

Produktfakta

- Motordrivet metallstativ med rektangulära ben och T-fot, med den tjocka delen i toppen av benet. Lackerat i svart struktur (24, RAL 9005), mörkgrå metallic struktur (26, RAL 9007), silver (62, RAL 9006), vit (Z4, RAL 9016) eller krom (90).
- Stativet har två motorer som är sammakopplade via ett buss system, ingen extern kontrollenhet behövs utan dessa funktioner ligger i varje ben.
- Slaglängd 500 mm (LO) eller 650 mm (HI).
- Finns med 2 respektive 3 ben, men kan byggas ut till 8 ben i samma system (vid fler än 3 ben måste man lägga till fler transformatorer som kan ge mer ström).
- Stativet har steglöst ställbara sarger som kan regleras i intervallet 1100-1950 mm, vilket passar för skivor i storlek 1200-2200 mm.
- Tillval: Programmerbar handkontroll (med display som bland annat kan programmera din höjd för sittande respektive stående arbete), antikollision (stativet stannar automatiskt vid kollision med något hinder) och skjutbar skiva (med och utan bordsskärm). OBS! Skjutbar skiva kan bara användas på 2 bens stativ med rektangulär skiva (ACTA20)!
- EFG Active presenteras i prislistan med bordsskivor och stativ separat. Detta innebär att vi har valfrihet i att kombinera skivor och stativ inom de ramar som konstruktion och normer tillåter.
- Bordsskivor med fasade kanter (F-utförande): 22 mm kärna av MDF belagd med 0,6 mm fanér i bok och björk med fasade kanter.
- Bordsskivor med raka kanter (S-utförande): 22 mm kärna av spånskiva belagd med 0,6 mm fanér i bok och björk med raka kanter. Bordsskivor belagda med direktlaminat (MB, MR, ME, MV, M6 och M8*) har 22 mm kärna av spånplatta och raka kanter.
- Andra viktiga tillbehör på en arbetsplats är; bordsskärm, monitorarm, kabelränna, CPU-hållare och eluttag.
- Garanti: 5 år mot konstruktions-, material- och tillverkningsfel.
- Testade enligt: EN 527-1, EN 527-2, EN 527-3, ISO 21016 - Durability height adjustment. Borden är CE-märkta och uppfyller AFS 2008:3 och AFS 2009:5 (European directive 2006/42/EG.).

TEKNISK INFO:

- Strömförsörjning: Samma aggregat, 110-240 V.
- Hastighet, med skiva upp till 30 kg: 40 mm/s.
- Hastighet, 70 kg: 33 mm/s.
- Maxbelastning vid drift: 120 kg (inkl. skiva).
- Överhettningsskydd: 1 min drift, 9 min vila.
- Ljud (mätning utförd med skiva 1600x800 mm, ca 17 kg): 40 dB (40-45 dB med skjutbar skiva).
- Förbrukning i standby: 0,45 W.
- MAX förbrukning vid drift, endast skiva (skiva 17 kg): 150 W.
- MAX förbrukning vid drift, belastning 120 kg (inkl. skiva): 320 W.
- Antal ben som kan kopplas till ett system: Max 8 st, därefter krävs extra strömförsörjning.
- Min-/maxhöjd, slaglängd 500 mm, rektangulära ben, tjocka röret upp (inkl. skiva 22 mm): 680-1180 mm.
- Min-/maxhöjd, slaglängd 650 mm, rektangulära ben, tjocka röret upp (inkl. skiva 22 mm): 640-1290 mm.
- Temperatur vid transport/lager: -40° till +65° C.
- Temperatur omgivning vid drift: 15-35° C.

EFG012680

EFG Active med bordsskärm EFG Tab samt arbetsstol EFG ONE.

EFG012498

Arbetsplats: EFG Active, EFG Storage Tower, EFG ONE och EFG Tab.

EFG012636

EFG Active, med steglöst ställbara sarger. Yttermått mellan sarger 160 mm.

USER MANUAL JOGGLE
Programmable hand control
with display (optional)

EN

Mount your Joggle

Use the 2 attached screws for fixing to the table top. If the thickness of the table top is less than 18 mm please use shorter screws.

In situation of sloped edges of the table top there could be need for a third fixing point. When screw will be chosen consider that 13mm will be "lost" due to the hand switch.

Connect your Joggle

EN EN

Connect the Bus cable to the hand switch. If appropriate, connect two bus cables to the hand switch.

Wheel icons

How to understand the symbols.

-Adjust the table upwards
-Scroll in the menu

-Adjust the table to sitting position
-Scroll to left in the menu

-Menu, press for the menu
-Enter, confirm your selection

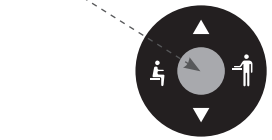

-Adjust the table downwards
-Scroll in the menu

-Adjust the table to standing position
-Scroll to right in the menu

Display layout

Explanation of the symbols.

EN EN

M Tool
Memory
E Error codes
Reset

" Imperial, inches
Thermometer
CM Metric, centimeter

15 sec –sleep mode

Display backlight will go to sleep mode after 15 sec of inactivity.

Start up

Initial display communication.

Under normal condition the display automatically went to display layout as right in 2 to 5 sec.

If the system feel a incomplete homing the homing icon well be visible.

Press the "down" symbol for homing.

Reset

If some components are changed (columns, motor, control for motors etc) there will be need for a "forced" reset. Please follow the instruction below.

EN EN

Forced Reset

If the reset symbol will be visible, please press (2 bottoms) min 7 sec, the reset symbol will show up.



Then press and hold "down" symbol until the columns have gone to lowest level.

Quick start

Run/Drive the table to the position you will store, sitting or standing. (Two different processes)

Press the menu button and hold for more than 2 sec.

Press "sitting"
left side
(memory 1)

Press "standing"
right side
(memory 2)

Go to memory 1

Go to memory 2

Press and hold

How to go to memory

EN EN

Press the menu button less than 2 sec.

Use **arrow up and down** to navigate to memory setting.

Hold Menu button to go to the stored position.

How to set memory

Run/Drive the table to the position you will store, sitting or standing.
(This device have 5 memories position memories)

Press menu button + "stand" icon 1 time to come to set memory menu.

Use **arrow up and down** to navigate to set memory setting.

Press Menu/Enter, and the value are stored.

The display confirm by flashing 3 times and then returns to normal mode.

Calibrate

Measure the distance between the floor and the top of the table sheet.

EN EN

Press menu button + "stand" icon 2 times to come to calibrate menu.

Press Menu/Enter to confirm

Adjust the figures to the selected value **with the arrows up or down.**

Press Menu/Enter, and the value are stored.

Upper limit

Set the upper limit if there are limited space in height.

Press menu button + "stand" icon 3 time to come to set memory menu.

Press Menu/Enter to confirm.

Adjust the figures to the chosen level **with the arrows up or down**.

Press Menu/Enter, and the value are stored.

Please notice that the figures count from the table top surface.

Lower limit

Set the lower limit if there are device/equipmentwich could create a risk of pinching or risk for table damages.

EN EN

Press menu button + "stand" icon 4 time to come to set memory menu.

Press Menu/Enter to confirm.

Adjust the figures to the chosen level **with the arrows up or down**.

Press Menu/Enter, and the value are stored.

Please notice that the figures count from the table top surface/ calibrated level.

Units

Choose between metric or Imperial system.

EN EN

Press menu button + "stand" icon 5 time to come to set memory menu.

Press Menu/Enter to confirm.

Adjust the settings **with the arrows up or down**.

Imperial, inches

Metrics, centimeters

Press Menu/Enter, and the setting are stored.

Reset away

EN EN

Press menu button + "stand" icon 6 time to come to set memory menu.

Press Menu/Enter to confirm.

Press "down" and hold until the columns have gone to the lowest position.

Do reset if any parts have been changed of if you discover interference between the columns

Error codes

1. Hard stop
2. Back off
3. Soft stop
4. Waiting for button
5. Waiting for button release
6. Motor lost

Overheating. Thermometer flashing, wait 10 minutes for motor cooling